28 January, 2015, www.brodit.com, © 2015 Brodit AB

Product 854842

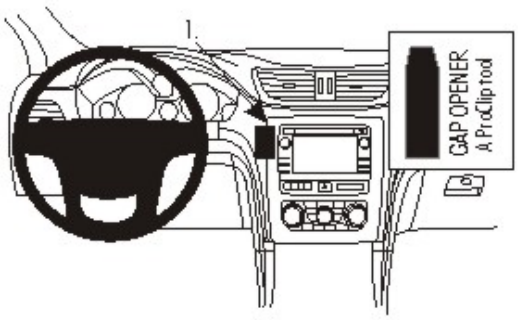

854842 ProClip

Center mount

The ProClip is a mounting bracket for the vehicle's dashboard. Onto the ProClip you can install e.g. a holder for your mobile phone or PDA or a handsfree set etc. Safe and convenient -always within easy reach. The ProClip is car specific and easy to install. The installation is quick, no special tools or dismantle of the dashboard is required and it will not damage the interior of the vehicle. Made in black ABS plastic. Comes with detailed instructions.

EAN: 7320288548425

Item no 854842 fits:
Chevrolet Traverse 13-15 (For USA)

INSTALLATION INSTRUCTIONS

1.

2.

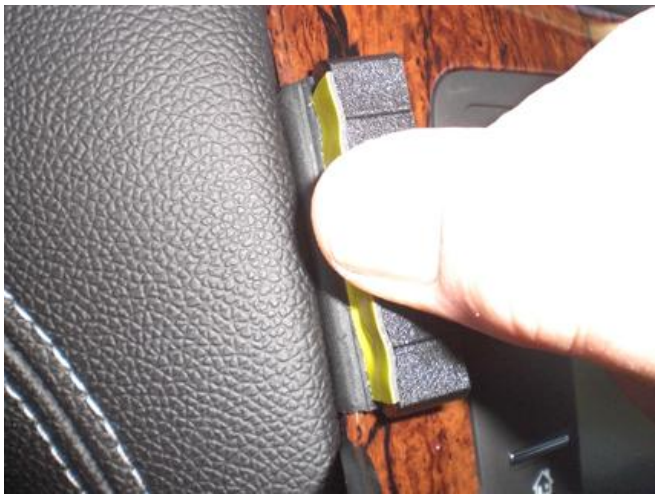

3.

4.

Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip consists of two parts: Part 1: The attaching part (the smallest part). Part 2: The ProClip faceplate

1. Press the thin end of the enclosed gap opener into the gap between the center console panel and padded part of the dashboard, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the cover of adhesive tape on the Part 1.

2. Place the thin edge of Part 1 against the gap above the gap opener in the exact same position and height as in the picture. The tape should be facing the passenger side. Press the thin edge firmly into the gap and at the same time: press Part 1 to the right until you see or hear/feel it click into place. Pull out the gap opener.

3. Press a screwdriver (Philips) firmly through the pre-drilled holes in Part 2 to open the holes. Peel off the cover of the adhesive tape. Place Part 2 onto Part 1 so the holes match and the tape is on the right side. Screw Part 2 onto Part 1 using the enclosed screws. Press the ProClip to the right with your thumb before tightening the screws, then press the adhesive tape to the center panel so it attaches. Hold the ProClip in that position and tighten the screws.

4. The ProClip is in place.